



QUADRIMAX

1100 - 1025 - 26

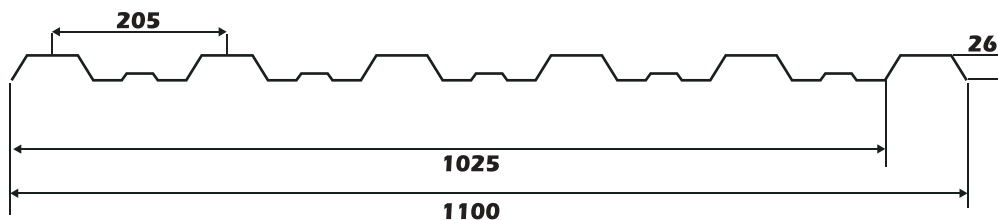


Thickness : 1.0 - 3.5 mm
Width : 1100 mm
Effective Width : 1025 mm
Purlin Spacing : 500 mm
Lengths : 2 - 8 meters

TRAPEZOİDAL EASY INSTALLATION


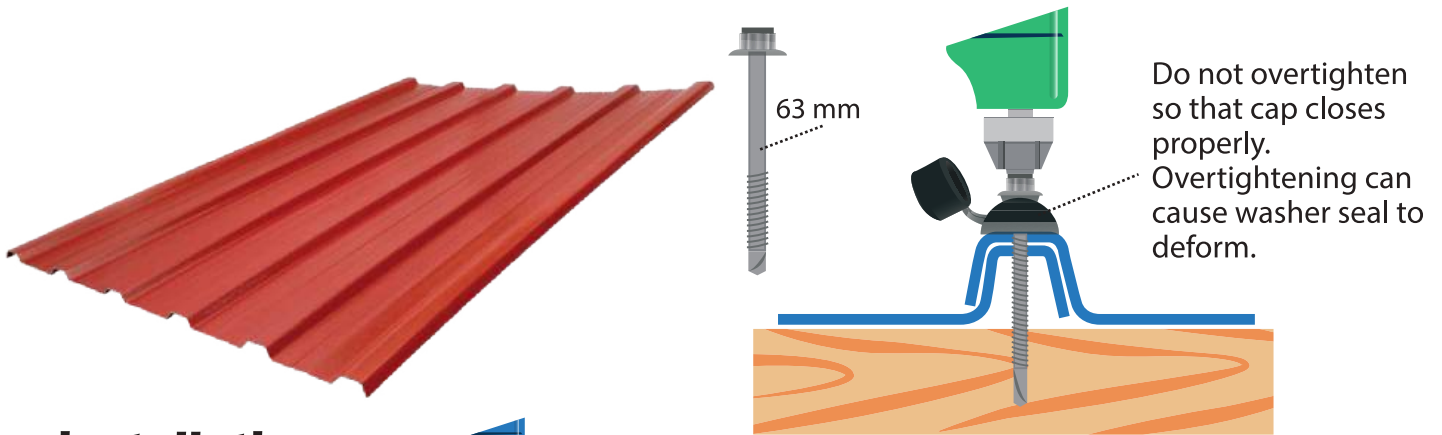


installation

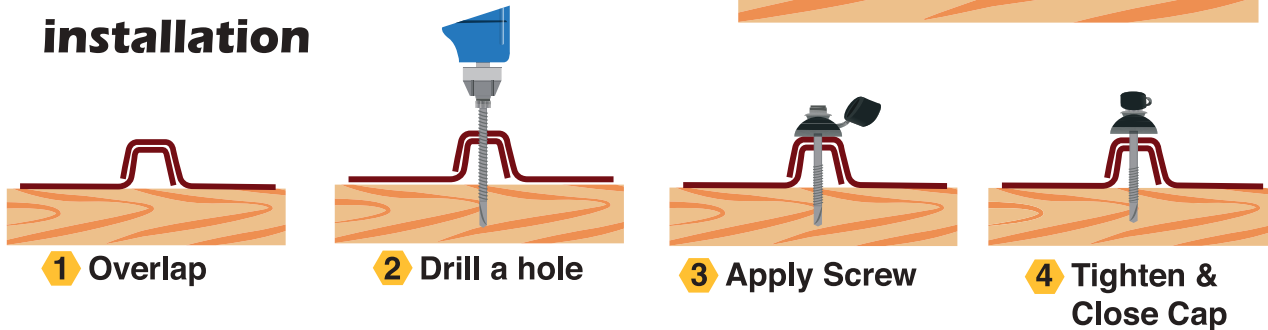

IZOFIX® (PDWC)


**PVC Dome Washer Seal With Cap
(63 mm x 75 mm) Anti - Expansion
screw with special butterfly
wing is recommended (for more info on screw
types please see page on bolting & fixing methot)**

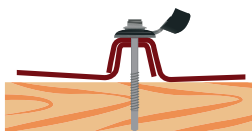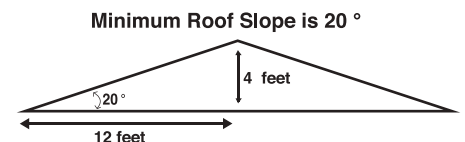



Too Tight!




Too Loose!

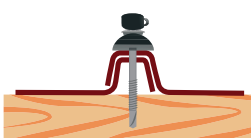

Good

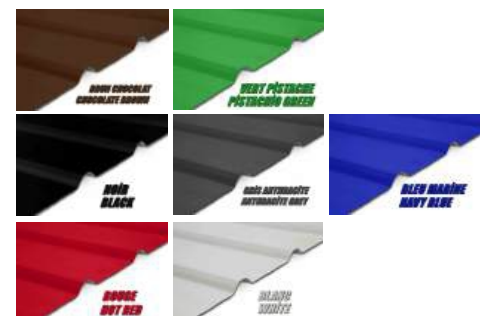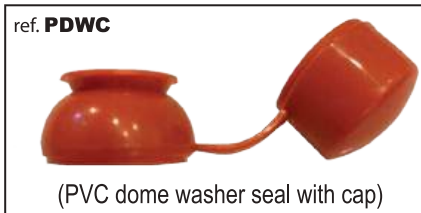


Wood or steel purlins can be used. Required Purlins Spacing: 50 to 75 cm. Use expansion - free roof screw on purlins. Ensure a good air ventilation under the roof. Hot air exhaust must be installed.

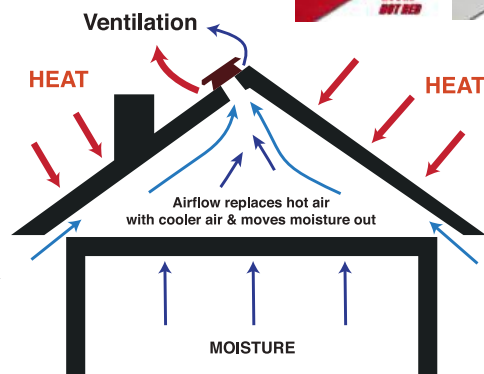


Roof Ventilation:
Make sure you have a good air circulation under your roof. Hot air must be let out thru outlet

Bolting and Fixing Method

Recommended screw grade : G14 (63 mm dia.) , with 8 mm Hex screw head
Lengths : 75mm, 90mm & 120mm

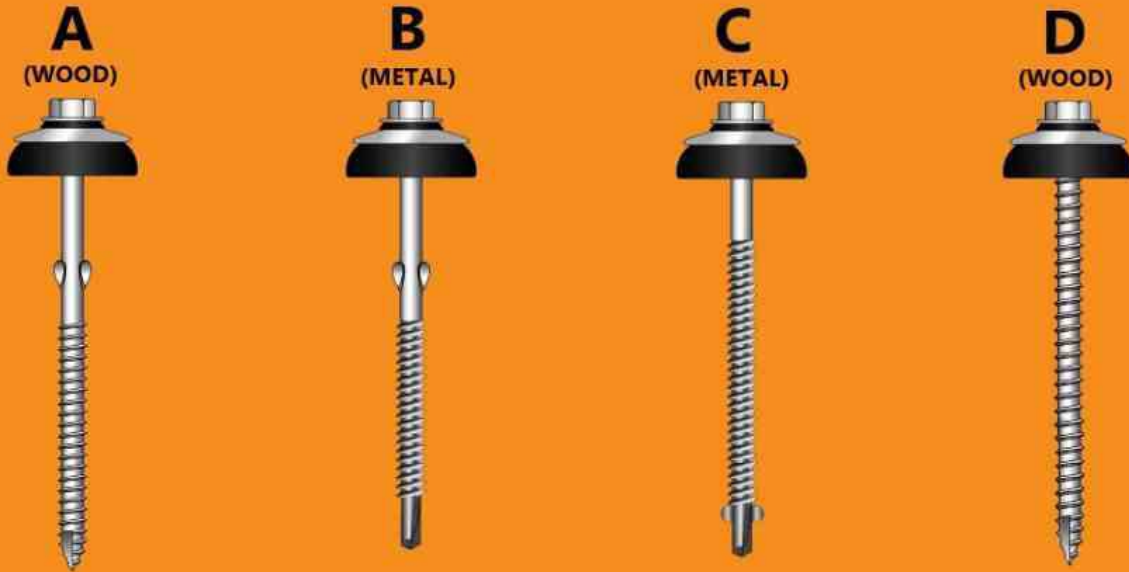

You can use anti-expansion roofing screws (with wings) for self-drilling wider screw hole. It is important that the screw has a rubber sealing washer for insuring watertightness. You can chose yo use any of the below types of washers or saddles with caps :

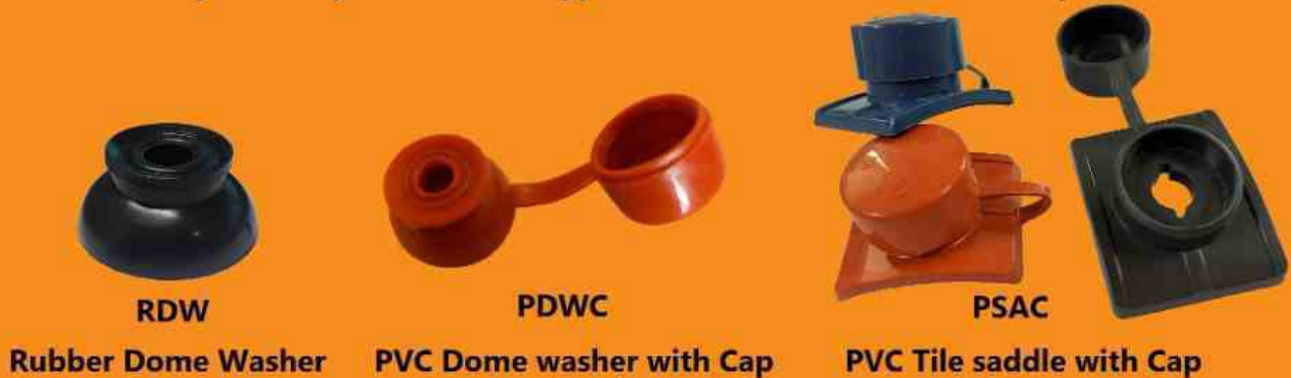

Expansion dampner hole must be 2 mm wider than screw Dia.



If screws with wings are not available, drill a hole with a diameter of 8.5 mm in the panel



Then apply and tighten the screw with the sealing washer